

ICOM 207

mic

REPEATER

Push 'BAND to desired band  
Push 'VFO , Push 'C'  
Enter freq numbers  
Push either DUP- or DUP+  
Push SET until DUP appears  
Push FUNC then TONE  
Push SET until 'T' and 'rt  
appears  
Push up or down key to desired  
sub tone freq  
Push FUNC then A  
Push up or down to select  
memory number  
Push FUNC then A for  
1 second. 3 beeps will sound  
Ron Green KG6RLG

ICOM 207

mic

SIMPLEX

Push BAND to desired band  
Push VFO, Push "C"  
Push FUNC then A  
Push up or down keys to  
Select memory number  
Push FUNC then A  
1 second  
DELETE MEMORY  
Radio only  
Push 'S.MW'  
Select memory number  
Push 'S.MW, Push again 1 sec  
3 beeps. "M" will flash  
Push any key