

Quick Reference Card for Yaesu VX-6R, courtesy W5JCK

| Yaesu VX-6R: Memory Storage | Yaesu VX-6R: Miscellaneous Operations |
|--|---|
| Press V/M for VFO mode , tune the receive frequency. | TX Power: Press F/W then TX PO to change level. |
| Press F/W then SET to enter Set mode . | Rev TX/RX: Press HM/RV (if Menu 28 is set to REV) or press F/W then HM/RV (if Menu 28 is set to HOME) |
| Set tone mode via Menu 60 SQL.TYP . Set tone frequency via Menu 66 TN FRQ . | PRI channel: Press and hold F/W for one second, turn to desired memory channel, press BAND . |
| Press PTT to save settings and exit Set mode . | Dual Watch: Press and hold DW for one second. |
| Press and hold F/W for one second, turn to desired memory channel, press F/W again to store frequency. | Lock Keypad: Press and hold LK for one second. |

Instructions: Print on a heavy card-stock paper. (Paper designed for printing photos will work well.) Cut out each (side-by-side) pair, then fold over so that Memory Storage appears on one side and Miscellaneous Operations appears on the other. Laminate and trim to the size of a credit card. It is now easily carried in your wallet or even in your ID badge holder.