## Yaesu FT-7800R Programming Steps

- 1. Press VM/MW key 3<sup>rd</sup>. from right multiple times momentarily until you reach VFO mode
- 2. Enter desired frequency by pushing appropriate numeric microphone keys.
- 3. Press Low/ACC key third from Left multiple times momentarily until Transmit Power set. It is not necessary to set the band when frequency is entered using numeric microphone keys
- 4. Press Momentarily the TONE/HM/RV Key second from the left until EMC is on display.
- 5. To Set PL Tone push and <u>hold</u> BAND/SET key and turn dial to menu #44 TN FRQ and then push the BAND/SET key <u>momentarily</u> to display PL tone frequencies and turn knob to desired PL tone frequency, then press again <u>momentarily</u> to return to TN FRQ and press and <u>hold</u> BAND/SET key to return to VFO
- 6. To set offset, ARS is on and will adjust automatically according to entered frequency. To set Simplex mode and turn off offset, push and hold BAND/SET (middle key 4 from right and left) key to enter Set mode and turn dial to menu #33 RPT Off.
- 7. While in VFO mode after saving Power level, PL Tone, offset and frequency desired, push and HOLD the VM/MW (third key from right) until memory location number blinks. Turn dial to desired memory location within 10 seconds and press momentarily VM/MW key to save data into that memory location and return to VFO mode.