

here is the short version of what to set up for VARA FM/HF (Yaesu FT-991A):

Radio Setup:

031 CAT RATE : 38400bps
032 CAT TOT : 100ms
062 DATA MODE : OTHERS
064 OTHER DISP (SSB) : 1500 Hz
064 OTHER SHIFT (SSB) : 1500 Hz
066 DATA LCUT FREQ : OFF
068 DATA HCUT FREQ : OFF
072 DATA PORT SELECT : USB
077 FM PKT PORT SELECT : USB

Rest of the settings DEFAULT (no changes to the PTT parameters!)

In VARA FM:

Settings - PTT...

PTT via CAT

Brand: Yaesu

Model: FT-991

Port: COM9 (!!!!!!! **Use Enhanced Port** / is for CAT) (standard port is for PTT only, but has a problem with switched of computers at the 991)

Bauds: 38400

RTS: checked

DTR: checked

RADIO MENU:

Mode - DATA-FM (for VARA FM)

Mode - DATA-USB (for VARA HF)

NAR/WIDE : W

WIDTH: 3000Hz

DT GAIN: 3-4

NB / NOTCH / CONTT / DNR / DNF : OFF

in addition;

the reason for your FM PTT problem is the setup parameter

076 FM PKT PTT SELECT

I suppose it is set to DAKY

set it to RTS and ONLY select RTS in VARA PTT Setup

But this is a setup that is not recommended!

Use my settings above and you are fine with all VARA MODES

=====
vy 73 de Markus OE5DMF