



ES100 K4 Carrying Case Assembly Instructions

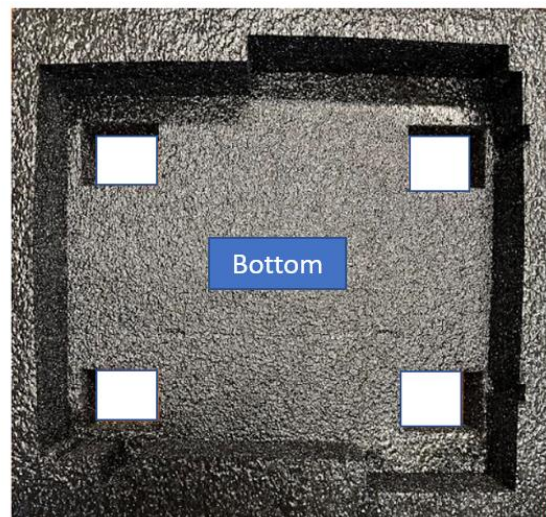

1. Remove the center cutout from the top and bottom protective foam insert.

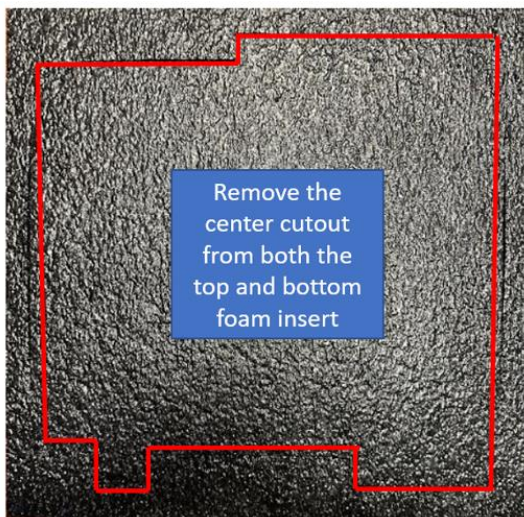

2. Place your K4 in the bottom protective foam insert. The bottom insert has four square holes for the K4 feet. Be sure to place your K4 so the front knobs match the protective foam insert cutout.





3. Place the top half of the foam insert over the top of your K4. If placed correctly, the top half of the foam insert will slide over the K4 easily.
4. Unzip the K4 canvas carrying case completely. Place your protected K4 in the opening.



5. Zip the carrying case completely closed before lifting the carrying case.



6. Replace the center cutouts in the protective foam inserts to maintain the shape of your foam inserts when not in use.